

Channel Setting for the ResponseCard RF

1. Press and release the “GO” button.
2. While the light is flashing red and green, Enter 2 digit channel code (ie. Channel 1 = 01, channel 21 = 21).
3. After the second digit is entered, press and release the “GO” button.
4. Press and release the “1/A” button. The light should flash yellow to confirm.

